


Models:
FPEM-1212P-A0200L
FlexiPanels FP3 series expansion models

INSTRUCTION SHEET

Thank you for purchasing FlexiPanels series analog expansion model FPEM-1212P-A0200L. Please read the instruction sheet and thoroughly familiarize yourself with the functions and characteristics of the products before use.

For more information, please refer user manual which will be available in FlexiSoft software help and/or you can download from REPL website.

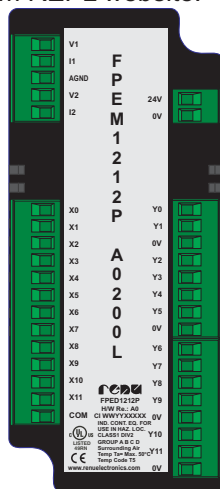

Specifications:

Power Supply: 24 VDC +/-15%, 12V from base
 Voltage Rating: Input/ Channel: 5mA, 24VDC
 Power Rating: Output/ Channel: 250mA @ 24VDC

Approvals: CE, UL

Digital Inputs: 12 Inputs Bi-directional Type
 (Within which 2 pairs are high speed)

Input Design: According to EN 61131-2 Type 1
 Min. ON Voltage: 15 VDC
 Max. ON Voltage: 30 VDC
 Min.OFF Voltage: -3VDC
 Max. OFF Voltage: 5 VDC
 Nominal input voltage: 24 VDC
 Nominal input current: 5mA typical
 Isolation: Optically isolated from internal circuit., High isolation

Input Impedance: 3k Ohm
 Turn OFF time: 10msec
 Turn ON time: 10msec

High Speed Inputs:
 No. of HS inputs: 2 pairs, X0-X1, X2-X3
 Max. i/p frequency: 200kHz
 Max. i/p count: 42949672965

Digital Outputs: 12 PNP type transistor outputs
 (2 PWM o/p) and
 22VDC
 Min. ON o/p Voltage: 30VDC
 Max. ON o/p Voltage: 0.2VDC
 Min. OFF o/p Voltage: 1VDC
 Max. OFF o/p Voltage: 30VDC
 Nominal Output voltage: 300mA Typ./channel
 Nominal o/p current: Optically isolated from internal circuit., High isolation voltage (BV = 3.7 KV)
 Isolation: Yes

Short Circuit protection: Yes
 Nominal load: 96ohms/6W (resistive) @ 24VDC 6VA (inductive, unity power factor)

High Speed Outputs:
 No. Of HS outputs: 2, Y0 and Y1
 Max. O/p frequency: 1kHz
 Frequency step: 1Hz
 PWM duty cycle: 0 to100%
 Duty cycle step: 1%

Analog Inputs: 2 Input Channels
 Voltage Input: 0 - 10 V, 0 - 5 V;
 Current Input: 0-20mA, 4-20mA
 Resolution: 16-bit
 Accuracy: 0.2% of full scale@ 25°C

General:
 Operating Temperature: **0 to 60°C.
 Storage Temperature: -20 to 85°C.
 Operating Humidity: 10% to 90% (Non condensing)
 Mechanical Dimension: 48mm x 108mm x 41mm (W x H x D)

Weight:

****Operating temperature: For UL 0 to 50 °C**

voltage(BV= 3.7KV)
 3k Ohm
 10msec
 10msec


Mounting Details:

Mounting with base models:

With the expansions, while unpacking the unit, user will find 2 screws already attached with base bottom case. Fix the expansion with the HMI as shown below with these screws. Expansion connector will also be fixed with the expansion female connector given on base HMI.


Apply torque 0.1Nm while fixing with base unit.


Mounting with FP3043TN-E and FP3043T-E models:

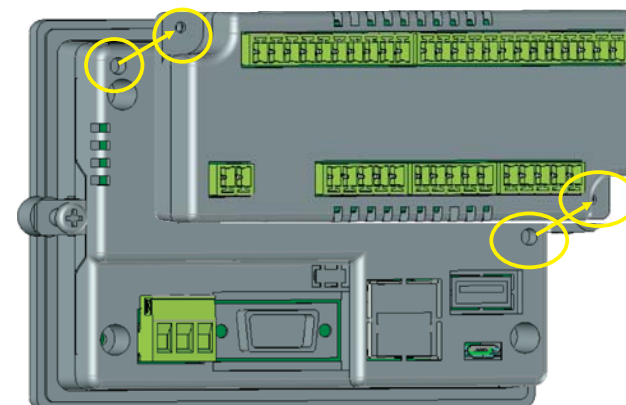


For 7" and 10.2" HMI models, the procedure of mounting expansions is same. Only instead of horizontal mounting, expansions will mount in vertical directions.

Hence accordingly these base are having facility to add 3 and 5 expansions at a time respectively. Example is shown here.

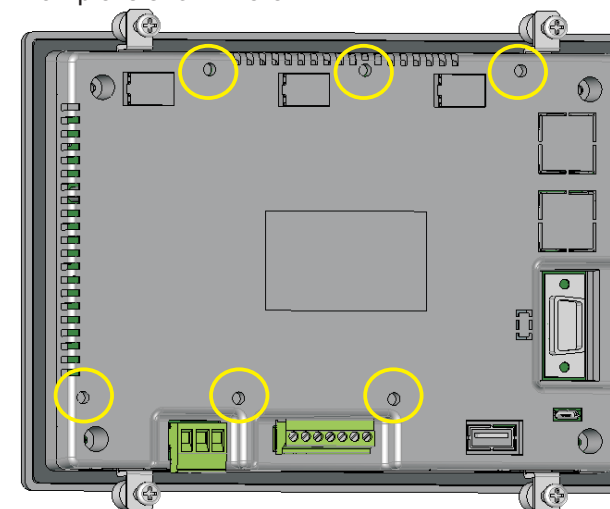


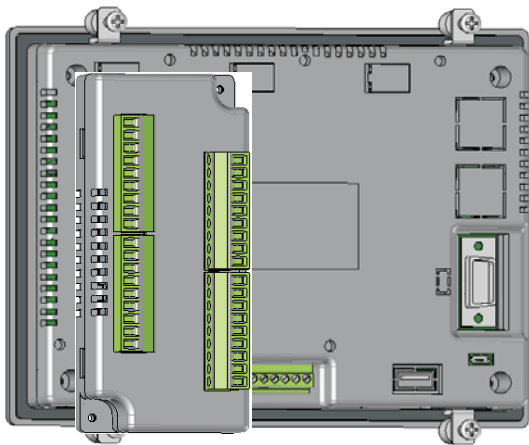


Wiring Diagram:
Digital Inputs:

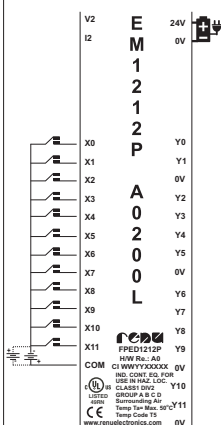


HSC Single phase up
counter

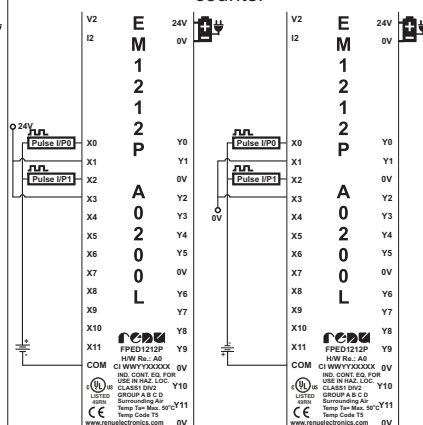


HSC Single phase down
counter

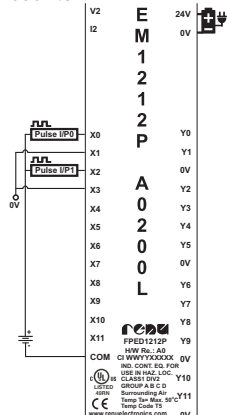


HSC Single phase down
counter

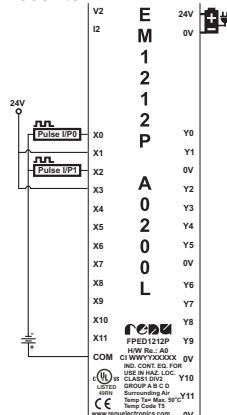


Quadrature:

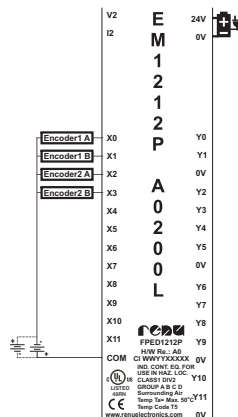


Digital output:

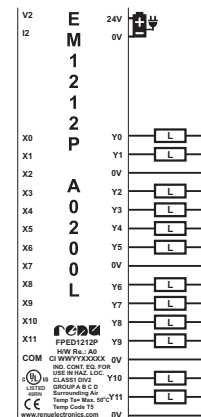

Analog Inputs:
Voltage

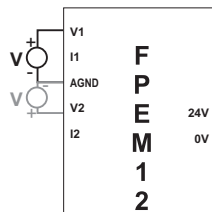

Current:

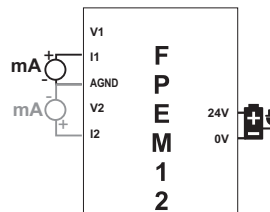

This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non-hazardous locations only.

WARNING – EXPLOSION HAZARD – Do not disconnect equipment unless power has been removed or the area is known to be non-hazardous.

WARNING – EXPLOSION HAZARD - Substitution of components may impair suitability for Class I, Division 2.

WARNING - CAUTION, Battery May Explode If Mistreated. Do Not Recharge, Disassemble Or Dispose Of In Fire.

The list of materials used in the construction of these devices with name of sealed device - generic name of the material and the supplier's name and type designation.

A recommendation for the user to periodically inspect the sealed devices used, for any degradation of properties and replace if degradation is found.

Technical Support:

For Technical support please contact factory along with the unit serial number and revision number written on the address sticker of the unit. Also provide information of the application used. Usually, including your application also provides a lot of help. If possible e-mail the application to factory.

MANUAL REVISIONS:

Rev. No.	Date	Description
1.00	31/01/17	First Draft