# FP4101 Series QUICK START GUIDE



## **Product Code:**

**FP4101T**: 1024 x 600, WVGA, 10.1" color TFT with 4-wire analog resistive touch screen with 2 comm port, one USB Type C port & Host port.

**FP4101TN**: 1024 x 600, WVGA, 10.1" color TFT with 4wire analog resistive touch screen with 2 comm port, one USB Type C port, one USB Host port & 1 Ethernet Port.

**FP4101T-E**: 1024 x 600, WVGA, 10.1" color TFT with 4wire analog resistive touch screen with 2 comm port, one USB Type C port & Host port. It supports upto 5 expansions.

**FP4101TN-E**: 1024 x 600, WVGA, 10.1" color TFT with 4wire analog resistive touch screen with 2 comm port, one USB Type C port, one USB Host port & 1 Ethernet Port. It supports upto 5 expansions.

## **GETTING STARTED**

User should follow the given sequence to configure and use any FlexiPanels series unit:

- 1. Install FlexiSoft Software.
- 2. Create a PZM application using FlexiSoft software.
- 3. Connect programming cable.
- 4. Download Firmware i.e. driver for the HMI.
- 5. Download application.
- 6. Now FP unit is ready to use in the system.




For More Information, Visit https://www.renuelectronics.com


## SPECIFICATIONS

Power (Base)	24VDC(+20%, -15%), 250mA, 6W (for T-E module)		
rower (base)	24VDC (+20%, - 15%), 270mA, 6.48W (for TN-E module)		
	24VDC(+20%, -15%), 500mA, 12W (for T-E		
Power	module)		
(with 5 Expansions)	24VDC(+20%, -15%), 520mA, 12.48W (for TN-E		
	module)		
Display 10.1", 1024 x 600pixels, WVGA color TFT			
	4-wire analog resistive touch screen		
LEDs	1		
RAM Memory	512MB		
User Application	Up to 1GB that includes user application, data log, alarms, retentive memory and logic memory		
eMMC	4GB		
RTC	Built-in, date and time function		
Expansion	It support 5 expansion slots*		
Weight	Approx. 900gm		
Product Dimensions	268.0(W) x 190.0(H) x 36.8(D)mm		
Panel Cut-out	256.00(W) x 178.00(H)mm		
Communication			
COM1 and COM2	RS232/RS485		
USB Ports	1 USB Type C Port and 1 USB Host Port		
Ethernet	1 Ethernet Port		
	Micro SD [High Capacity (4GB to 32GB)]		
SD Card	Speed Class: @@@@u		
	[While inserting and removing SD card, please make sure to TURNOFF the power to the unit.]		
Environment & Appro			
Operating			
Temperature	-10° to 60°C**		
Storage Temperature	-20° to 85°C		
Humidity	10 to 90% (Non-Condensing)		
	IEC 60068-2-27		
Shock	25g, 11ms, 6 shocks per axis, total 18 shocks (X,		
	Y, Z)		
Vibration	IEC 60068-2-6		
	5 to 150Hz, 3g peak (X, Y, Z)		
	EN 55011 : 2009/A1 : 2010		
EMC	EN 61131-2 : 2007		
	EN 61000-6-2 : 2005/AC : 2005 EN 61000-6-4 : 2007/A1 : 2011		
Protection	IP66 for front panel mounting		
APPROVALS	CE, UL(Class1 Div2) & RoHS		
ALLOVALS	CL, OL(CIOSST DIVZ) & NOTIS		


[\*Note: Applicable only for FP4101Tx-E models.] [\*\*Note: For UL, operating temperature range is 0° to 50°C.]

## **PRODUCT DIMENSIONS**

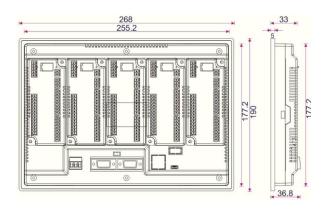

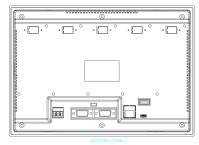

## PANEL CUTOUT DIMENSIONS

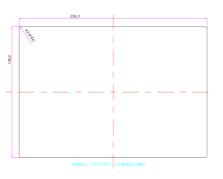

[Panel Cutout Dimensions: 256.00(W) x 178.00(H)mm, Panel Thickness: Maximum 6mm and Mounting Clamps: 6] Tighten the mounting screws evenly to a torque between 0.4N/m to maintain water and dust resistance.

## COMMUNICATION INTERFACES

This section provides information regarding communication interfaces supported by this product.

#### COM1 & COM2: RS485/RS232

$ \bigcirc \begin{pmatrix} 1 \circ \circ \circ \circ \circ \circ \\ 6 \circ \circ \circ \circ \circ \\ 9 \end{pmatrix} \bigcirc \\ DB9 \text{ Female} $			
Pin number	Signal		
1	TX+(RS422/RS485)		
2	TXD(RS232)		
3	RXD(RS232)		
4	RX+(RS422/RS485)		
5 GN			
6	NC		
7	NC		
8	TX-(RS422/RS485)		
9	RX-(RS422/RS485)		

#### **Ethernet Port**

1. Fully compliant with IEEE 802.3 / 802.3u standards.

2. 10/100 Mbps support.

3. Connector used: Standard shielded RJ-45 female jack with in-built speed and link activity indication LEDs.

Pin number	Signal	
1	TX+	
2	TX-	
3	RX+	
4	NC	
5	NC	
6	RX-	
7	NC	
8	NC	

### USB Type C

USB Type C, compliant with USB 2.0 specification, self-powered device.
 Connector used: Micro USB Type C Female connector.

Pin number	Signal	
1	VCC	
2	D-	
3	D+	
4	NC	
5	GND	

### **USB Host Port**

- 1. USB Host, compliant with USB 2.0 specification
- 2. USB Host can be used to transfer logged data and historical alarm to USB memory stick.
- 3. USB Host can handle only USB memory stick devices and can source current up to 150mA only.
- 4. Connector used: Standard USB Type a Female connector.

Pin number	Signal
1	VCC
2	D-
3	D+
4	GND

### **Cable Diagrams**

#### PC to unit programming cable (RS232):

Driver end FP U		FP Unit side (C	PUnit side (COM2)	
Pin number	Signal	Pinnumber	Signal	
2	TXD -	2	RXD	
3	RXD -	3	TXD	
5	GND .	5	GND	

### 2 Wire RS485 connections:

Driver end (PLC side or 2 wire network side)

Signal	 Pin number	Signal
A (TX+ / RX+)	 1	TX+
B (TX- / RX-)	 4	RX+
GND	 - 5	GND and Shield
	8	TX-
	9	RX-

### 4 Wire RS485 connections:

Driver end (PLC side or 2 wire network side) FP Unit side (COM2)

FP Unit side (COM2)

Signal	Pin number	Signal
RX+	1	TX+
TX+	4	RX+
GND	5	GND and Shield
RX-	8	TX-
TX-	9	RX-

### Earthing


The optimum method for Earthing electronic equipment is to earth it separately from other high-power systems, to earth more than one unit of electronic equipment with a single-point earth. The Earthing marked terminal (see below) is provided on the unit.



[Note: Do not use an earth that has an unstable impedance, such as painted screws or earth subject to vibration.]

## **UL APPROVAL**

CONTROL DRAWING NO# CNTL/DWG/FP4101/0218 VER.NO.:1.00

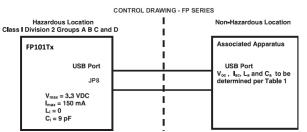

### TABLE 1:

Nonincendive. Equipment		Associated Apparatus
V max (or Ui)	2	Voc or Vt (or Uo)
I max (or li)	$\geq$	Isc or It (or Io)
Ci + Ccable	≤	Ca (or Co)
Li + Lcable	$\leq$	La (or Lo)

Capacitance and inductance of the field wiring from the nonincendive equipment to the associated apparatus shall be calculated and must be included in the system calculations as shown in Table 1. Where the cable capacitance and inductance per foot are not known, the following values shall be used: Ccable = 60 pF/ft, Lcable = 0.2 µH/ft. Wiring method must be in accordance with ANSI/NFPA70

#### WARNING:

- -> This equipment is suitable for use in Class I, Division 2, Groups A, B, C and D or non- hazardous locations only.
- -> WARNING EXPLOSION HAZARD Do not disconnect equipment unless
- power has been removed or the area is known to be non-hazardous.
- -> WARNING EXPLOSION HAZARD Substitution of components may impair suitability for Class I, Division 2.
- -> WARNING CAUTION, Battery May Explode If Mistreated. Do Not Recharge, Disassemble or Dispose of in Fire.

-> The list of materials used in the construction of these devices with name of sealed device - generic name of the material and the supplier's name and type designation.

-> It is recommended that the user periodically inspect the sealed devices used, for any degradation of properties and Replace the device if any degradation is found.

## **REVISION HISTORY**

Rev.	Description	Date
1.0	First Draft	23/03/2020
1.1	Replaced USB type from Micro to Type C	21/07/2021

RENU Electronics Pvt. Ltd® reserves the right to change or discontinue specifications and features without prior notice.

To view the latest and updated datasheets/manuals please visit *www.renuelectronics.com*.